


# JOHN DEERE 90 SERIES SNOUT WEAR STRIP

## MOUNTING INSTRUCTIONS

1. Remove Front Snout and Back Divider Snout from row unit. Fold and place on its side.
2. Remove hinge bolt from Snout and Back Divider, replace bolt thru Wear Strip and Poly. Do not tighten.
3. Clamp Wear Strip in position against the bottom of the Snout. Drill a 3/8 diameter hole thru the Snout Poly using the Wear Strip as a template. Install and tighten the 3/8 X 1 1/2 bolt, nut and washer

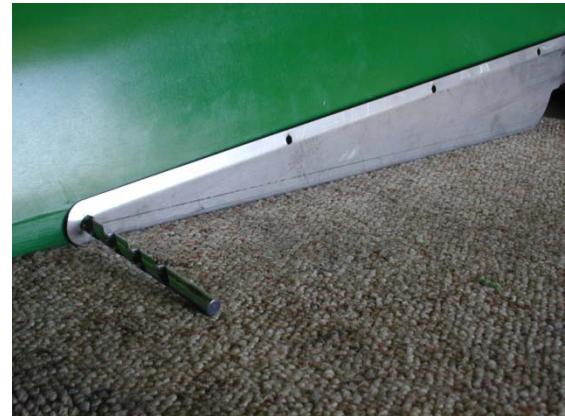

4. Install all self tapping screws thru the bottom of the Wear Strip into the poly. Depending on the wear, some screws might not have poly material to run some of the screws into.
5. Tighten the hinge bolt at this time. (picture #2)
6. Clamp the Wear Strip to the side of the poly. Install the self tapping screws thru the side of the Wear Strip into the Poly, starting at the front working toward the back.



7. Repeat procedure for the other side.